



3M™ Airstream™ AH9 Respirator System

Care and Maintenance



Integrated welding, grinding, head and powered respiratory protection.

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Powered and Supplied Air Respirators.

Before Use

- Inspect Helmet for incorrectly fitted parts, deep scratches, cuts and discolouration. Replace if necessary
- Inspect Head Harness, Face Seal and Visor for damage and scratches. Remove and replace if necessary
- Replace Pre-Filter
- Ensure Pre-Filter and Main Filter are correctly fitted and the Motor Housing Spring Clip is in position
- Check Visor can be raised and lowered into correct position
- Conduct Air Flow Check using fully charged battery. Replace main filter if required
- Check Welding Lens is correctly fitted into shield. Replace outer cover lens if required

Monthly

- Carry out all the 'Before Use' inspections and create record of this monthly check

After Use

- Clean with cloth dampened with a mild solution of water and liquid household soap
- Disinfect with 3M™ 105 Wipes
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents

Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.


Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.

The Power to Protect Your World

3M Health & Safety Helpline
Monday - Friday 9 to 5
0870 60 800 60 UK
1 800 320 500 IRELAND

EAR PELTOR

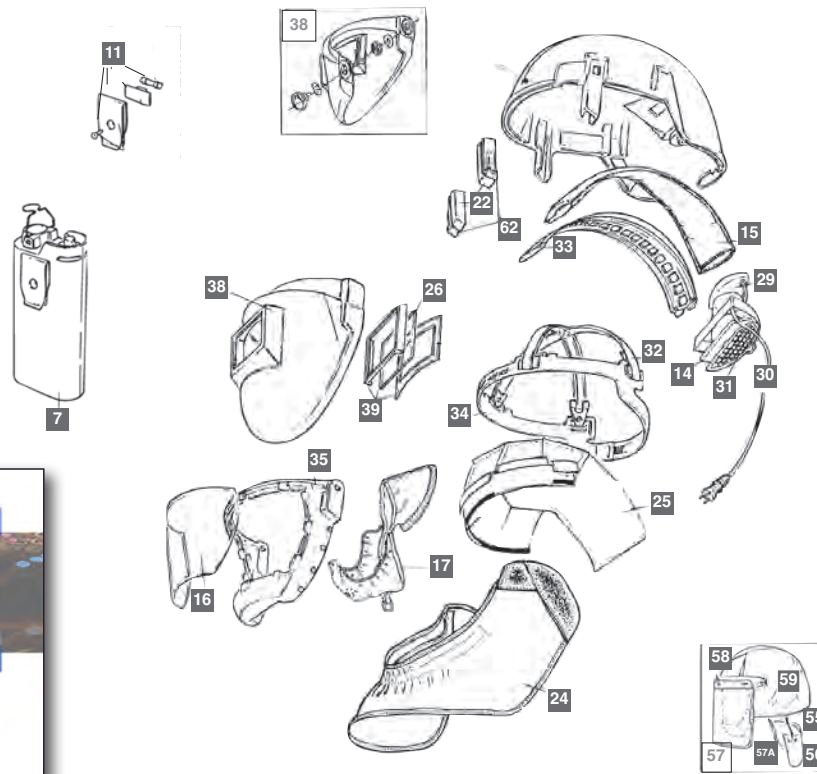

	3M Part No
AH9 Welding with super battery pack*	100-60-19P
Single station battery charger	003-00-04P
7 Super battery pack	007-00-03P
11 Battery repair kit – multipack (5 kits)	007-00-57P5
14 Pre-filter	060-22-00Px10

15	High efficiency main filter	060-23-04P10x4
16	Visor-standard (polycarbonate)	060-75-00P5x4
16	Visor-solar tinted (1.7/1.8)	060-75-02P5x4
16	Visor-scratch resistant	060-75-01P5x4
17	Face and head seal	060-45-14P
22	Temple seals and carrier assembly (5 pairs)	060-49-52P
24	Neck protector and spare velcro	060-50-05P
25	Skull cap	060-39-08P
26	Outer cover lens – 82mm x 108mm	061-32-03P
29	High efficiency housing assembly with cable	060-04-04P
30	Motor housing cable with plug	060-44-06P
31	Outer grille, standard, white	060-20-00P3
32	Cradle assembly	060-32-05P5
33	Expander	060-07-04P5
34	Flame retardant headband	060-38-02P2
35	Visor surround kit (black) comprising: visor surround and welding shield attachment kit	060-10-06P
38	Welding shield attachment kit – multi pack (5 kits) comprising; pivot nuts, screws and retainers; pivot screws and wavy washers; thrust and detent washers and retainers	061-30-51P5
38	Welding shield kit (UK size lens) comprising; welding shield; welding shield attachment kit and filter lens kit	061-30-02P1
39	Filter lens kit – multi pack (10 kits) comprising; cover lens; lens gasket and retaining clip (UK size)	061-32-11P10
55	Snood (helmet cover)	060-50-01P
56	Snood (neck cover)	060-50-02P
57	Radiant Heat Kit	061-05-00P
57A	Tinted, Heat Resistant Over Visor	VIS-19
58	Accessory bracket	061-55-00P
59	Pivots and cams	061-37-03P1
	Over Visor carrier assembly	061-55-10P
	Peel-off visor (direct fix)	087-09-04P10x4
	Peel-off visor kit comprising: 4 fixing clips; 5 inner overlays; 100 overlay visors (not suitable where static may create flammable risk)	060-75-13P

* including pre filter, main filter, rechargeable battery pack, airflow indicator and user instructions. Battery chargers must be ordered separately.

@3M_UK_Safety

3M Personal Safety Division
3M United Kingdom plc
3M Centre
Cain Road, Bracknell
Berkshire RG12 8HT
Tel: 0870 60 800 60
www.3M.co.uk/Safety

3M Ireland Limited
The Iveagh Building
The Park
Carrickmines
Dublin 18
Tel: 1 800 320 500

17808
3M and Airstream are trademarks of 3M Company
Please recycle. Printed in UK.
© 3M 2014. All rights reserved.

REPLACE ALL DAMAGED PARTS IMMEDIATELY TO ENSURE CORRECT LEVELS OF PROTECTION

For more information on all our products, call 3M Personal Safety Division on 0870 60 800 60 (UK) and 1800 320 500 (Ireland) or visit www.3M.co.uk/safety



Distributed by Industrial Scientific Supplies, a division of Camlab Ltd

Camlab Ltd, Norman Way Industrial Estate, Over, Cambridge, CB24 5WE
Telephone: +44 (0)1954 233145
Email: sales@camlab.co.uk
www.industrialscientific.co.uk

