



3M™ Airstream™ AH4 & AH7 Respirator Systems



Care and Maintenance

The original powered air helmets.

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Powered and Supplied Air Respirators.

Before Use

- Inspect Helmet for incorrectly fitted parts, deep scratches, cuts and discolouration. Replace if necessary.
- Inspect Head Harness, Face Seal and Visor for damage and scratches. Remove and replace if necessary.
- Replace Pre-Filter
- Ensure Pre-Filter and Main Filter are correctly fitted and the Motor Housing Spring Clip is in position
- Check Visor can be raised and lowered into correct position
- Conduct an Air Flow Check using fully charged battery. Replace main filter if required

Monthly

- Carry out all the 'Before Use' inspections and create record of this monthly check

After Use


- Clean with cloth dampened with a mild solution of water and liquid household soap
- Disinfect with 3M™ 105 Wipes
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents

Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.

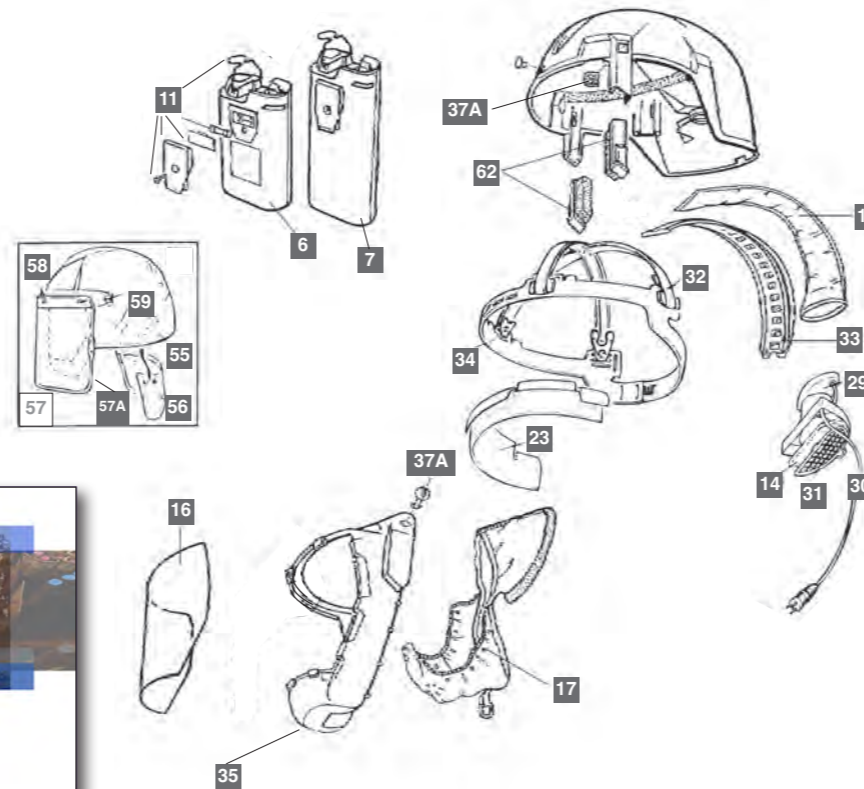

3M Health & Safety Helpline
Monday - Friday 9 to 5
0870 60 800 60 UK
1 800 320 500 IRELAND

EAR PELTOR

	3M Part No
AH4 with standard battery pack*	100-60-08P
AH4 with super battery pack*	100-60-15P
AH7 with standard battery pack**	100-60-37P
AH7 with super battery pack**	100-60-21P

	Single station battery charger – (for standard battery packs supplied 007-00-01P and 007-00-17P)	003-00-00P
	Single station battery charger – (for super battery pack 007-00-03P)	003-00-04P
6	Standard battery pack	007-00-01P
7	Super battery pack	007-00-03P
11	Battery repair kit (super and standard batteries) – multipack (5 kits)	007-00-57P5
14	Pre-filter	060-22-00Px10
15	High efficiency main filter (AH4)	060-23-04P10x4
15	Main filter charcoal (AH7)	060-23-11P5x4
16	Visor-standard (polycarbonate)	060-75-00P5x4
16	Visor-solar tinted (1.7/1.8)	060-75-02P5x4
16	Visor-scratch resistant	060-75-01P5x4
17	Face and head seal	060-45-14P
23	Comfort band	060-39-01P
29	High efficiency housing assembly with cable	060-04-04P
30	Motor housing cable with plug	060-44-06P
31	Outer grille, standard, white	060-20-00P3
32	Cradle assembly	060-32-05P5
33	Expander	060-07-04P5
34	Flame retardant headband	060-38-02P2
35	Visor surround kit including pivots and cams	060-10-00P
37A	Pivot and cams set – multi pack (10 sets)	061-37-00P10
55	Snood (helmet cover)	060-50-01P
56	Snood (neck cover)	060-50-02P
57A	Tinted, Heat Resistant Over Visor	VIS-19
58	Accessory bracket	061-55-00P
59	Pivots and cams	061-37-03P1
62	Temple seals and carrier assembly (5 pairs)	060-49-52P
	Over Visor carrier assembly	061-55-10P
	Peel-off visor (direct fix)	087-09-04P10x4
	Peel-off visor kit comprising: 4 fixing clips; 5 inner overlays; 100 overlay visors (not suitable where static may create flammable risk)	060-75-13P

* including pre filter, main filter and rechargeable battery pack.
** including pre filter and rechargeable battery pack, main filter not supplied.
Airflow indicator and user instructions supplied with all models. Battery chargers must be ordered separately.



Distributed by Industrial Scientific Supplies, a division of Camlab Ltd

Camlab Ltd, Norman Way Industrial Estate, Over, Cambridge, CB24 5WE
Telephone: +44 (0)1954 233145
Email: sales@camlab.co.uk
www.industrialscientific.co.uk



@3M_UK_Safety

3M Personal Safety Division
3M United Kingdom plc
3M Centre
Cain Road, Bracknell
Berkshire RG12 8HT
Tel: 0870 60 800 60
www.3M.co.uk/Safety

3M Ireland Limited
The Iveagh Building
The Park
Carrickmines
Dublin 18
Tel: 1 800 320 500

17808
3M and Airstream are trademarks of 3M Company
Please recycle. Printed in UK.
© 3M 2014. All rights reserved.

**REPLACE ALL DAMAGED PARTS IMMEDIATELY TO ENSURE
CORRECT LEVELS OF PROTECTION**

For more information on all our products, call 3M Personal Safety Division on 0870 60 800 60 (UK) and 1800 320 500 (Ireland) or visit www.3M.co.uk/safety