



## 3M™ Versaflo™ M-300 Series Helmets



### Care and Maintenance

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Powered and Supplied Air Respirators.

#### Before Use

- Inspect for damage and replace if necessary:
  - Face seal – ensure it is inserted properly and free from splits and tears.
  - Visor, its surround and gasket.
  - Forehead seal.
  - Head harness.
  - Comfort pad/s.
- Replace Peel Off visor covers (if used).

#### Monthly

- Carry out all the “Before Use” inspections thoroughly and create a record of this monthly check.

#### After Use


- Clean with cloth dampened with a mild solution of water and liquid household soap
- Disinfect surfaces with 3M™ 105 Wipes
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents

**3M Health & Safety Helpline**  
Monday - Friday 9 to 5

0870 60 800 60 UK  
1 800 320 500 IRELAND



**REPLACE ALL DAMAGED PARTS IMMEDIATELY TO  
ENSURE CORRECT LEVELS OF PROTECTION**

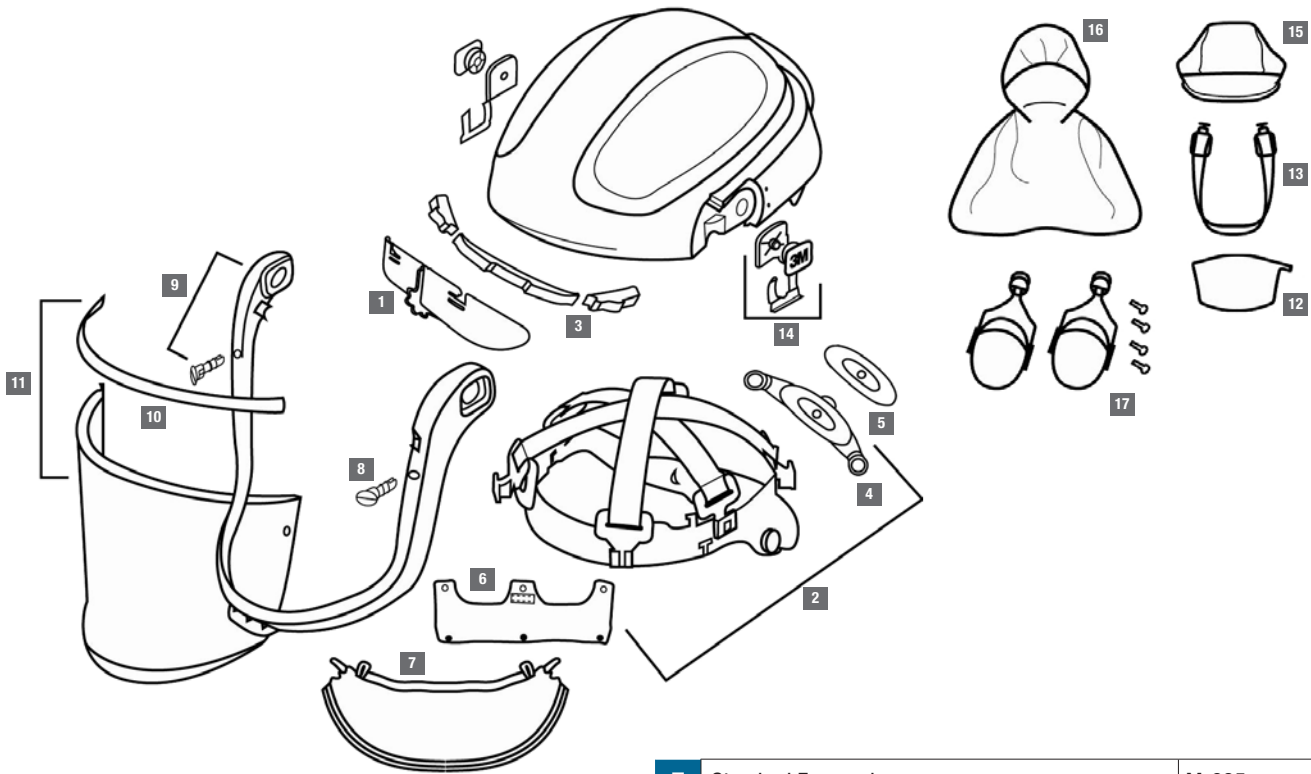

	3M Part No
3M™ Versaflo™ M-306 Respiratory Helmet, with Coated Visor and Comfort Faceseal	M-306
3M™ Versaflo™ M-307 Respiratory Helmet, with Coated Visor and Flame Resistant Faceseal	M-307
Accessories and spare parts	
1 Airflow Deflector	M-316
2 Head Suspension	M-350
3 Forehead Seal	M-354
4 Rotary Ratchet	M-953
5 Size Reducing Ratchet Comfort Pad	M-956
6 Forehead Comfort Pad	M-957

7 Standard Faceseal	M-935
7 Comfort Faceseal	M-936
7 Flame Resistant Faceseal	M-937
8 Visor Frame Buttons	M-919
9 Visor Frame Assembly	M-920
10 Visor Gasket	M-921
11 Coated Visor	M-927
12 Peel-Off Visor Covers	M-928
13 Chin Strap	M-958
14 Visor Pivot Kit	M-960
15 Flame Resistant Headtop Cover	M-972
16 Head, Neck and Shoulder Cover	M-976
17 3M™ Peltor™ Hearing Protector H31P3AF Helmet Attachment	H31P3AF 300

### Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

### Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.



**Occupational Health & Environmental Safety Group**  
**3M United Kingdom PLC**  
 3M Centre,  
 Cain Road, Bracknell  
 Berkshire RG12 8HT  
 Tel: 0870 60 800 60  
 www.3M.co.uk/ohes

**3M Ireland Limited**  
 The Iveagh Building  
 The Park  
 Carrickmines  
 Dublin 18  
 Tel: 1 800 320 500



Distributed by Industrial Scientific Supplies, a division of Camlab Ltd

Camlab Ltd, Norman Way Industrial Estate, Over, Cambridge, CB24 5WE  
 Telephone: +44 (0)1954 233145  
 Email: sales@camlab.co.uk  
 www.industrialscientific.co.uk

Please recycle.  
 Printed in the United Kingdom.  
 © 3M 2010. All rights reserved.