



3M™ Versaflo™ S-133 Headcover

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance.

► Before Use

- Inspect Comfort Band.
Remove and replace if necessary.
- Inspect hood.
Ensure elasticated edges are intact, fabric is free from splits or tears and visor is undamaged.
Discard and replace hood if necessary.
- Replace Visor Peel-Off (if used).

► Monthly

- Carry out all the 'Before Use' inspections and create record of this monthly check for the hood.

► After Use


- Clean with cloth dampened with a mild solution of water and liquid household soap.
- Disinfect with 3M 105 Wipes.
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents.

► Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

► Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.

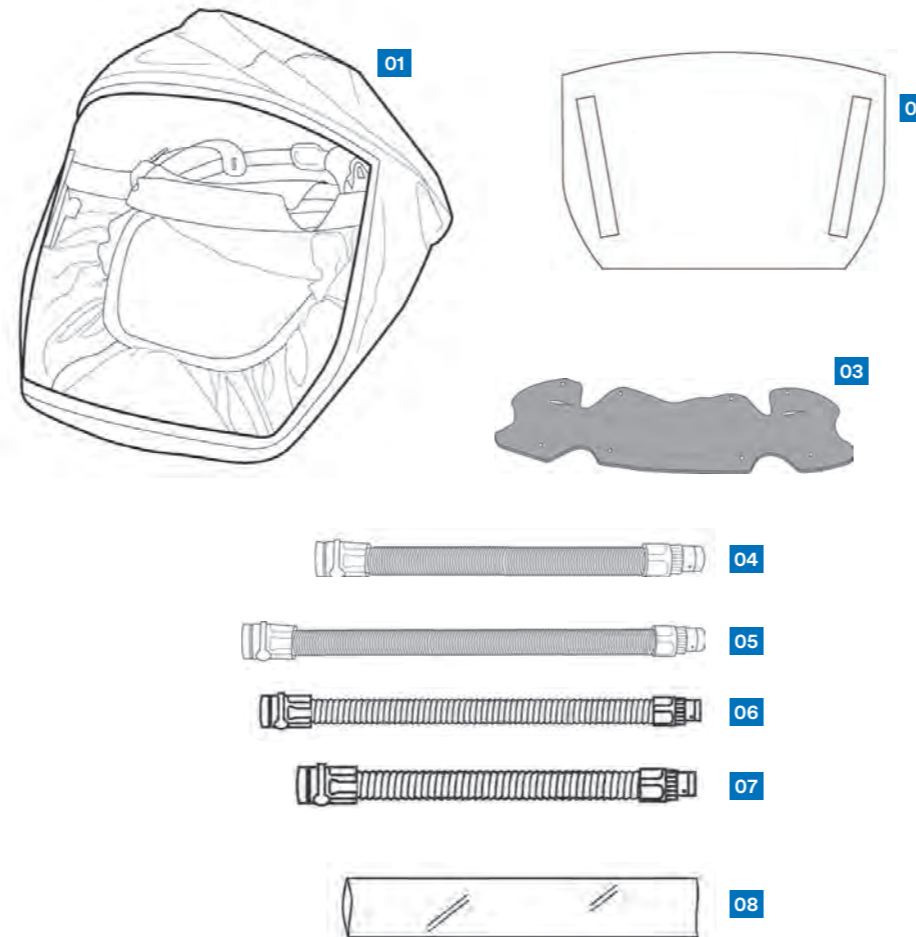

Description		Part N°
01	S-133S Headcover (small)	S-133S
01	S-133L Headcover (large)	S-133L
02	Visor Cover for Integrated Harness Products, small/medium (x4)	S-920S
02	Visor Cover for Integrated Harness Products, medium/large (x4)	S-920L
03	Comfort Pad for Integrated Head Suspension Products small/medium	S-957S
03	Comfort Pad for Integrated Head Suspension Products medium/large	S-957L
04	Breathing Tube, small/medium	BT-20S
05	Breathing Tube, medium/large	BT-20L
06	Length Adjusting Breathing Tube	BT-30
07	Heavy Duty Rubber Breathing Tube	BT-40
08	Disposable Breathing Tube Cover	BT-922

Semi-disposable hood with replaceable comfort band. Combines face (low energy impact and liquid splash) and respiratory protection.



Distributed by Industrial Scientific Supplies, a division of Camlab Ltd

Camlab Ltd, Norman Way Industrial Estate, Over, Cambridge, CB24 5WE
Telephone: +44 (0)1954 233145
Email: sales@camlab.co.uk
www.industrialscientific.co.uk

@3M_UK_Safety

3M Health & Safety Helpline
Monday - Friday 9 to 5
0870 60 800 60 - UK
1 800 320 500 - IRELAND

3M Personal Safety Division
3M United Kingdom plc
3M Centre, Cain Road
Bracknell, Berkshire RG12 8HT
United Kingdom
Tel: 0870 60 800 60
www.3M.co.uk/safety

3M Ireland Limited
The Iveagh Building
The Park
Carrickmines
Dublin 18
Tel: 1 800 320 500

Please recycle. Printed in UK.
3M is trademark of the 3M company.
© 3M 2015. All rights reserved.
J308790

Replace all damaged parts immediately to ensure correct levels of protection.



CHS133CMP
To download this poster please visit:
www.3M.co.uk/maintenancepack or scan the QR code.

For more information on all our products, call 3M Personal Safety Division on 0870 60 800 60 (UK) and 1800 320 500 (Ireland) or visit www.3M.co.uk/safety