Science. Applied to Life.™

Care and Maintenance

3M[™] Versaflo[™]S-333G Headcover

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance.

Before Use

- Inspect Comfort Band. Remove and replace if necessary.
- Inspect hood. Ensure elasticated edges are intact, fabric is free from splits or tears and visor is undamaged.
- Discard and replace hood if necessary.
- Replace Visor Peel-Off (if used).

Monthly

• Carry out all the 'Before Use' inspections and create record of this monthly check for the hood.

After Use


- Clean with cloth dampened with a mild solution of water and liquid household soap.
- Disinfect with 3M 105 Wipes.
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents.


Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.

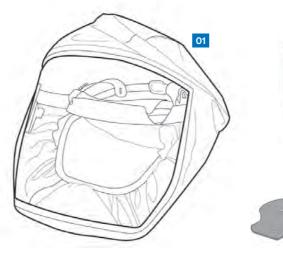

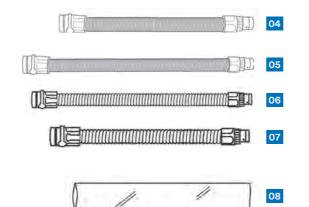

Replace all damaged parts immediately to ensure correct levels of protection.



CHS333CMP To download this poster please visit: www.3M.co.uk/maintenancepack or scan the QR code. For more information on all our products, call 3M Personal Safety Division on 0870 60 800 60 (UK) and 1800 320 500 (Ireland) or visit www.3M.co.uk/safety

02

	Description	Part N°
01	S-333SG Headcover (small)	S-333SG
01	S-333LG Headcover (large)	S-333LG
02	Visor Cover for Integrated Harness Products, small/medium (x4)	S-920S
02	Visor Cover for Integrated Harness Products, medium/large (x4)	S-920L
03	Comfort Pad for Integrated Head Suspension Products small/medium	S-957S
03	Comfort Pad for Integrated Head Suspension Products medium/large	S-957L
04	Breathing Tube, small/medium	BT-20S
05	Breathing Tube, medium/large	BT-20L
06	Length Adjusting Breathing Tube	BT-30
07	Heavy Duty Rubber Breathing Tube	BT-40
08	Disposable Breathing Tube Cover	BT-922

Semi-disposable hood with replaceable comfort band. Combines face (low energy impact and liquid splash) and respiratory protection.

eg camlab

Telephone: +44 (0)1954 233145 Email: sales@camlab.co.uk www.industrialscientific.co.uk

@3M_UK_Safety



3M Personal Safety Division 3M United Kingdom plc 3M Centre, Cain Road Bracknell, Berkshire RG12 8HT United Kingdom Tel: 0870 60 800 60 www.3M.co.uk/safety

3M Ireland Limited

The Iveagh Building The Park Carrickmines Dublin 18 Tel: 1800 320 500

Please recycle. Printed in UK. 3M and Versaflo are trademarks of the 3M company. © 3M 2015. All rights reserved. J308790





Distributed by Industrial Scientific Supplies, a division of Camlab Ltd

Camlab Ltd, Norman Way Industrial Estate, Over, Cambridge, CB24 5WE

3M Health & Safety Helpline