

## 3M™ Versaflo™ S-855E Hood

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance.

### ► Before Use

- Inspect Comfort Band.  
Remove and replace if necessary.
- Inspect hood.  
Ensure hood fabric and neck seal are free from splits or tears and visor is undamaged  
If required remove head harness and connector - Discard and replace hood (Ensure head harness and connector are correctly installed into new hood).
- Replace Visor Peel-Off (if used).

### ► Monthly

- Carry out all the 'Before Use' inspections and create record of this monthly check for the hood.

### ► After Use


- Clean with cloth dampened with a mild solution of water and liquid household soap.
- Disinfect with 3M 105 Wipes.
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents.

### ► Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

### ► Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.

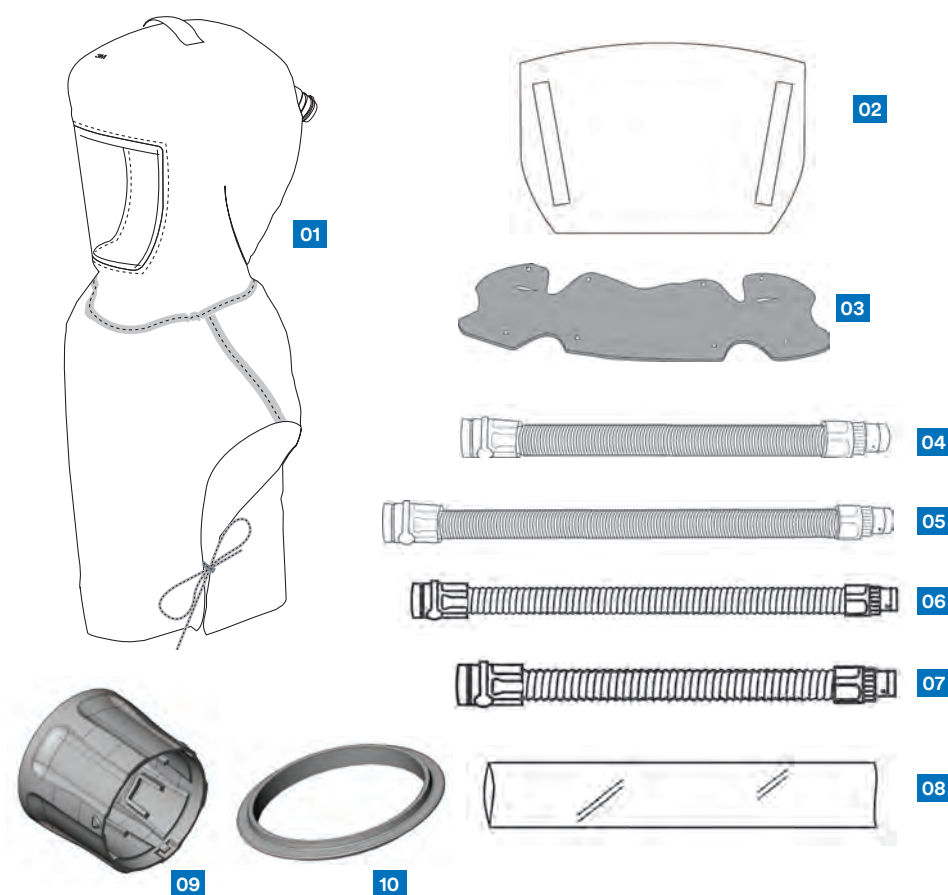

	Description	Part N°
01	S-855E Chemical Hood	S-855
03	Visor Cover for S-855E Chemical Hood	S-922
03	Comfort Pad for Premium Head Suspension	S-953
04	Breathing Tube, small/medium	BT-20S
05	Breathing Tube, medium/large	BT-20L
06	Length Adjusting Breathing Tube	BT-30
07	Heavy Duty Rubber Breathing Tube	BT-40
08	Disposable Breathing Tube Cover	BT-922
09	Airflow Adjustment Cover	S-955
10	Air Duct Sealing Ring	S-956
	Replacement fabric for S-855 Hood	S-805E-5

**Replace all damaged parts immediately  
to ensure correct levels of protection.**



CHS855ECMP  
To download this poster please visit:  
[www.3M.co.uk/maintenancepack](http://www.3M.co.uk/maintenancepack) or scan the QR code.

For more information on all our products, call 3M Personal Safety Division on 0870 60 800 60 (UK) and 1800 320 500 (Ireland) or visit [www.3M.co.uk/safety](http://www.3M.co.uk/safety)

3M Personal Safety Division  
3M United Kingdom plc  
3M Centre, Cain Road  
Bracknell, Berkshire RG12 8HT  
United Kingdom  
Tel: 0870 60 800 60  
[www.3M.co.uk/safety](http://www.3M.co.uk/safety)

3M Ireland Limited  
The Iveagh Building  
The Park  
Carrickmines  
Dublin 18  
Tel: 1 800 320 500

Please recycle. Printed in UK.  
3M is trademark of the 3M company.  
© 3M 2015. All rights reserved.  
J308790



Distributed by Industrial Scientific Supplies, a division of Camlab Ltd

Camlab Ltd, Norman Way Industrial Estate, Over, Cambridge, CB24 5WE  
Telephone: +44 (0)1954 233145  
Email: [sales@camlab.co.uk](mailto:sales@camlab.co.uk)  
[www.industrialscientific.co.uk](http://www.industrialscientific.co.uk)

🐦 @3M\_UK\_Safety



### 3M Health & Safety Helpline

Monday - Friday 9 to 5

**0870 60 800 60 - UK**  
**1 800 320 500 - IRELAND**