

3M Occupational Health & Environmental Safety
3M™ 6000 Series Full Face Mask Respirators



Exceptional quality
& unrivalled
comfort

3M 6000 Series Full Mask Respirators

The 3M 6000 full face mask's low maintenance design offers maximum comfort and simplicity for high efficiency at your workplace. The exhalation valve helps make your breathing easier with long-wearing comfort.

One of the lightest, most well-balanced respirators available, the 3M 6000 full face masks come with easy-to-adjust head straps. Be flexible and select the appropriate filters for your individual applications from our comprehensive range.





3M™ 6000 Series Reusable Full Face Masks

The 3M 6000 series full face masks are simple to handle and comfortable for the wearer. The exhalation port provides increased durability and is easy to keep clean. Available in three sizes, all masks have the 3M™ bayonet connection system

enabling connection to a broad range of twin lightweight filters to protect against gases, vapours and particulates depending on your individual needs.

Features and Benefits:

Full Facepiece

- + Soft, non-allergenic elastomeric facepiece
- + Extremely lightweight (400 grams) for high comfort

Full Face Lens

- + Broad field of vision
- + Polycarbonate lens, scratch and impact resistant to EN166:2001 B

4 Strap Head Suspension

- + Easy to put on and take off
- + Well balanced

3M™ Cool Flow™ Exhalation Valve

- + Less exhalation resistance
- + Easier breathing
- + Less heat and sweat build-up
- + Downwards flow of exhaled air
- + Minimised dirt-traps to stay clean
- + Sleek look and feel



3M™ 6800 Full Face Mask (M)
EN136:1998 (Class 1)

Filter Connection

- + Twin filter design provides better weight distribution and more balanced fit
- + Safe and secure fit
- + Marking of attachment point
- + Flexible System for gas, vapour, particulate filters
- + Optional supplied-air connection

Plus

- + Available in three sizes distinguished by different colours:
6700 – small (light grey)
6800 – medium (grey)
6900 – large (dark grey)

Fits well with

- + Hearing Protection from 3M


Accessories for 3M Respirators



3M™ S200 Supplied Air System



3M™ 105 Face Seal Cleaner

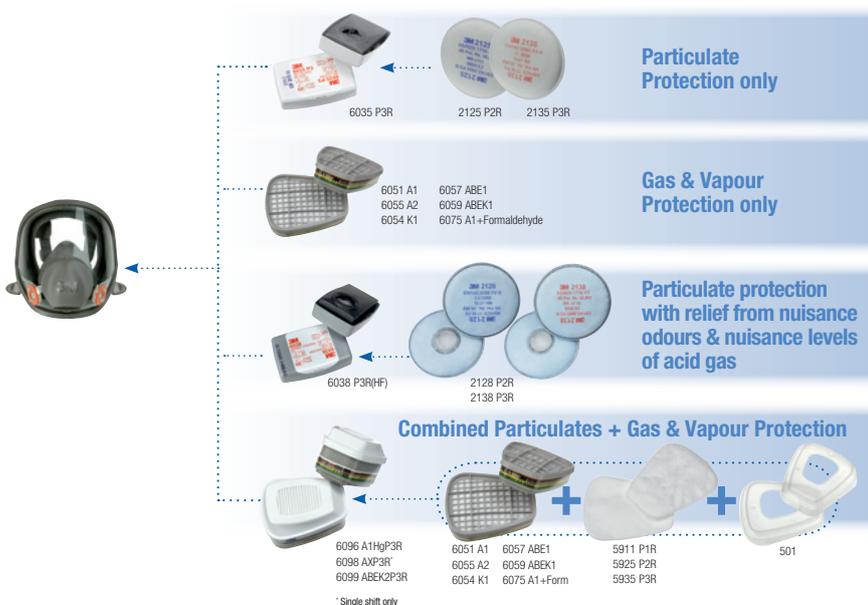

Occupational Health & Environmental Safety Group 3M United Kingdom plc

3M Centre,
Cain Road, Bracknell
Berkshire RG12 8HT
Tel: 0870 60 800 60
www.3M.co.uk/ohes

3M Ireland Limited

The Iveagh Building
The Park
Carrickmines
Dublin 18
Tel: 1 800 320 500

To find out about our full range of personal protective equipment please visit:
www.3M.co.uk/ohes